


## Adjustments

### Folding Arm, Tubeside Section


To adjust spring tension of Folding Arm, proceed as follows:

1. Position tubeside section of Folding Arm, in highest horizontal position, parallel to floor; other section of Arm should be vertical. (Fig. 39)
2. Remove caps at (A) at front of arm cover.  
**Note:** One side of pin (B) is keyed.
3. Tap out the pin, (B) at front of arm cover and raise cover (C) for access to the threaded bushing (D) used to adjust spring tension.
4. Turn bushing clockwise to increase spring tension, counter-clockwise to decrease tension.
5. Replace cover, pin and caps.

**Note:** Other section of Folding Arm may be adjusted by removing its cover and adjusting spring tension as above.

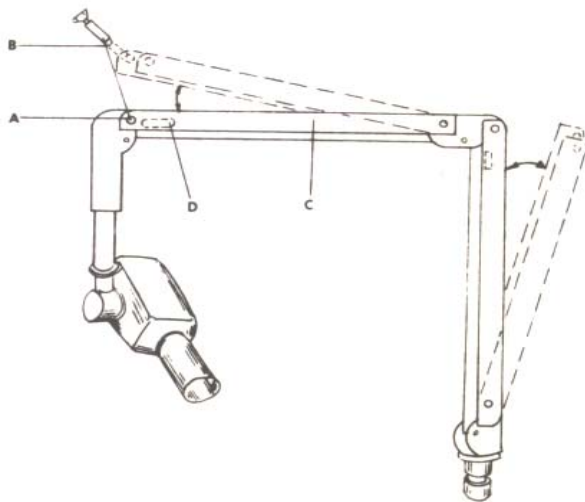

**Fig. 39**  
*Folding Arm  
Tension Adjustment*

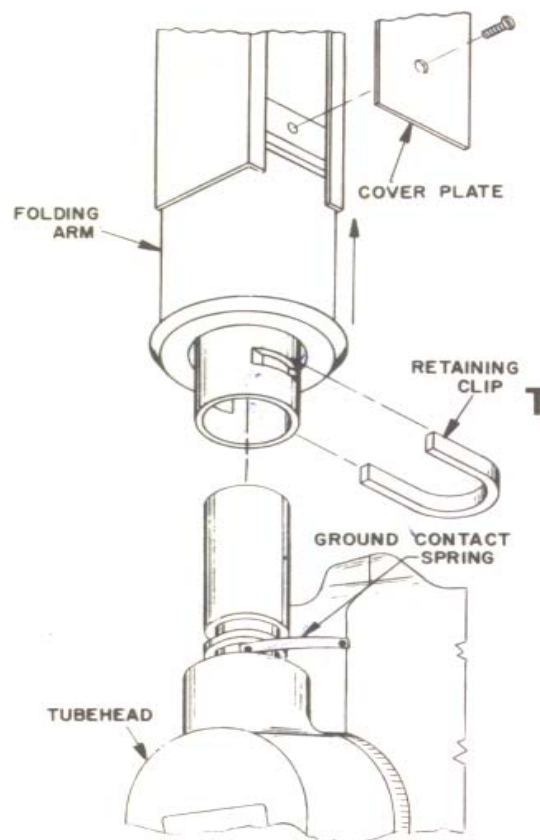

**Fig. 38**  
*Installing  
Tubehead*

To remove tubehead,

1. Remove single screw from coverplate (upper right)
2. Slide tubular cover (labeled - "folding arm") up.
3. Lift folding arm so section adjacent to Tube head is parallel to floor. Arm may swing up if you Do not do this!!
4. Supporting Tubehead with one hand, remove Retaining clip. If you do not support tube head, it will fall to floor. !!
5. Tube head should slip out of receiver.